


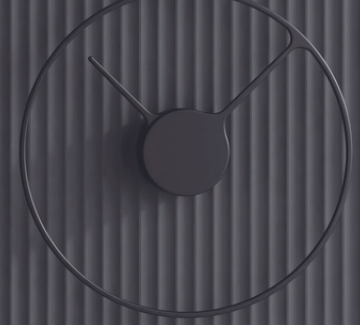

# sublime

collection



# WALL PROFILE

## Installation guide

### REQUIRED TOOLS

- Wood construction adhesive
- 18 gauge finishing nails
- Finishing nail gun
- Cutting tools

### PREPARATION

Ensure that the panels are stored horizontally and can acclimate for at least 48 hours prior to installation. Prepare and inspect the wall to ensure that the surface is in good condition, clean, and dry.

### STEP 1

Measure the surface of your project and draw guidelines to ensure the success of your installation.



### STEP 2

Using a saw with a finishing blade, cut the first wall panel to the required dimensions. Then apply adhesive to 1" of the four edges of the panel. Then position the panel on the wall, checking that it is straight and level.

### STEP 3

Use a nail gun to attach the wall profiles to the wall using 18 gauge finish nails. Then, insert the second panel into the first panel and lock it for a finished appearance without visible gasket. Repeat this step until the end of your project.

For optimal construction, the use of plywood panels between your wall and wall profiles is recommended.

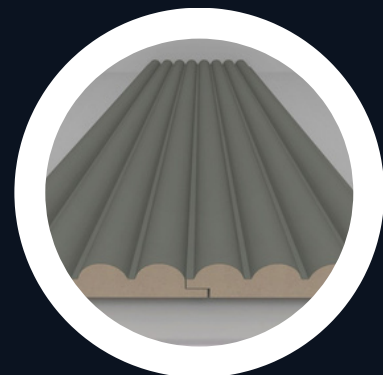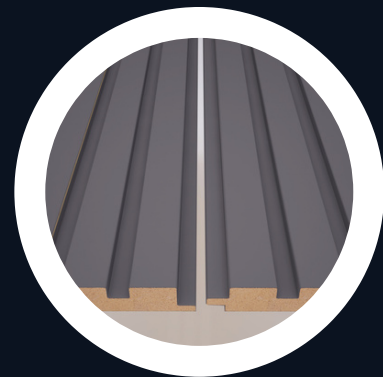

Learn more  
[sublimecollection.com](http://sublimecollection.com)